



Intuitive

Powerful

Adaptable

Adaptive Vision Sp. z o. o.
ul. Bojkowska 35a, 44-100 Gliwice, Poland
Phone: +48 32 461 23 30
E-mail: info@adaptive-vision.com

Application Note

Interfacing Gocator to Adaptive Vision Studio

Created: 15 October 2018

Modified: 23 July 2019

Document version: 1.0.6

Contents

1. Purpose and equipment.....	3
2. Overview	4
3. Setting up Adaptive Vision Studio with a Gocator for the first time.....	5
4. Troubleshooting	8
5. Gocator filters in Adaptive Vision Studio	9
6. Working with Emulator	10
7. Examples	11

1. Purpose and equipment

Purpose:

This document explains how to interface a Gocator sensor to Adaptive Vision Studio.

Required equipment:

Gocator Firmware Release 3.2 or later

Adaptive Vision Studio 4.10 Professional or later

2. Overview

A Gocator is an advanced sensor created by LMI Technologies. It is purposed for 3D machine vision and processing point clouds. The Gocator has many functionalities including:

- Scanning objects and representing them as a point cloud or intensity images,
- Various representations of scans,
- Basic tools for 3D processing like: filtering, thresholding etc.,
- Tools for performing measurements.

Adaptive Vision Studio is data-flow based software designed for machine vision engineers. It does not require any programming skills yet is still powerful enough to compete with solutions based on low-level programming libraries. This has been proved with some of the most interesting vision systems in the world. The architecture is highly flexible, ensuring that users can easily adapt the product to the way they work and to specific requirements of any project.


Why Adaptive Vision Studio?

- Because you work much faster than with low-level programming.
- Because this is the most powerful graphical software on the market.
- Because you are getting everything you need for industrial image analysis – together with the highest performance and flexibility.
- Because the world is changing, and new challenges require new approaches.


3. Setting up Adaptive Vision Studio with a Gocator for the first time

Each sensor is shipped with a default IP address of 192.168.1.10. So before working with the Gocator you must make sure that the IP address has been set correctly and is unique for each device in the network. You can verify that with the steps described below:


1. Connect a Gocator to the PC running Adaptive Vision Studio Professional.
2. Power up the Gocator, connect it to the PC via Ethernet interface.
3. Open Control Panel on your PC.
4. Find Network and Sharing Center.
5. Choose Change adapter settings.
6. Right-click on unidentified network connection, choose Properties.
7. In Ethernet Properties find Internet Protocol Version 4 (TCP/IPv4) and click Properties.

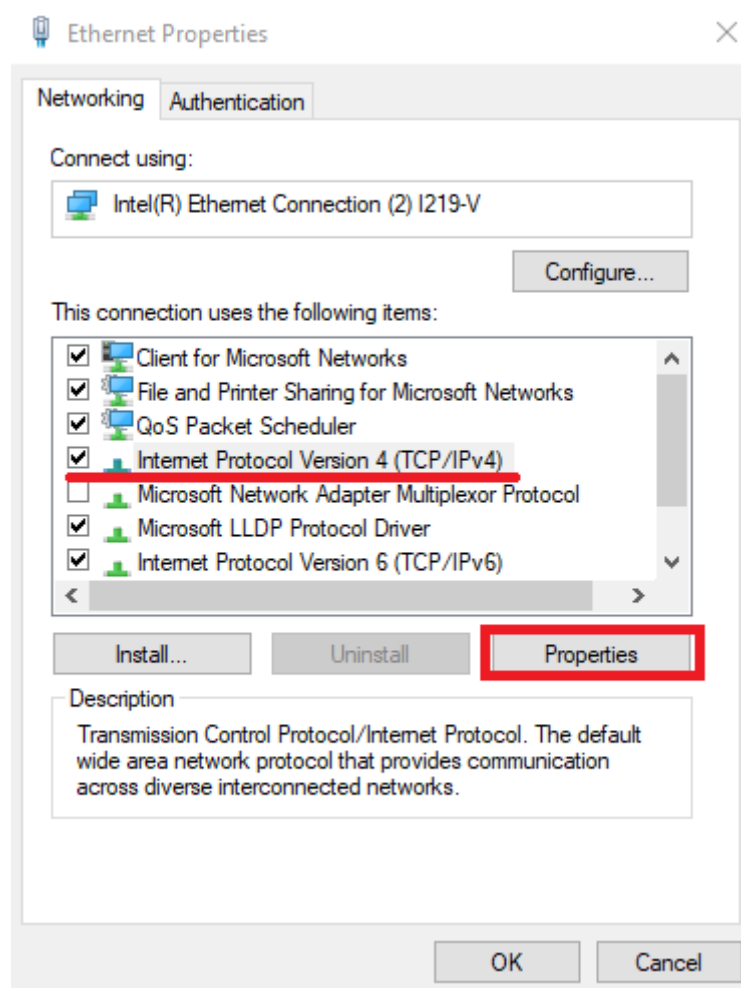


8. In General tab, choose Use the following IP address and set:
 - a. IP address to (for example) 192.168.1.5
 - b. Subnet mask to 255.255.255.0
9. Click OK and Close. Now you should be able to connect with the Gocator. You can verify this using your web browser.
10. In a search tab, type 192.168.1.10 and click Enter.

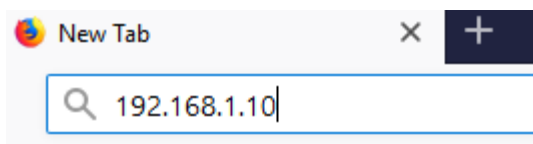

11. You should see this user interface:

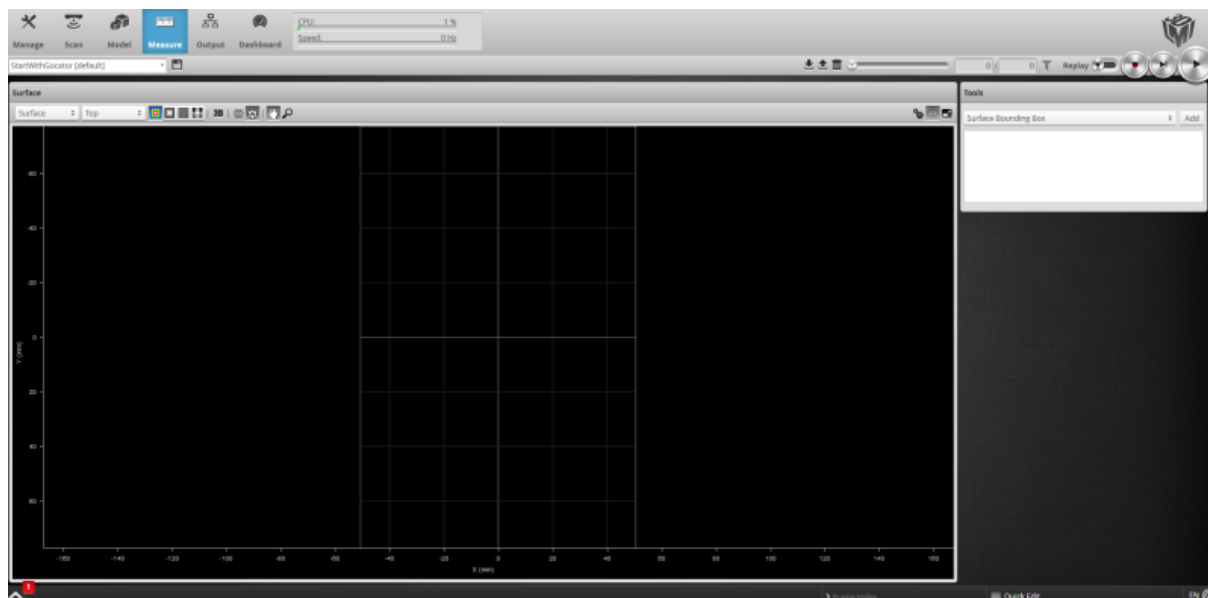


12. The provided browser-based user interface allows you to configure the parameters of the Gocator sensor. Before working with Gocator in Adaptive Vision Studio it is required to set parameters in the browser interface because from the Studio side you are unable to change them. In Adaptive Vision you will see data the same as in the browser. To send specific data outputs to Adaptive Vision Studio click on the “Output” tab and there select Ethernet output. Then you must choose the data to send. Note that marking all outputs is optional so it is possible to mark only these which are interesting for you. For example, with the setup shown below you will be able to acquire Surface and Surface Intensity in Adaptive Vision Studio.

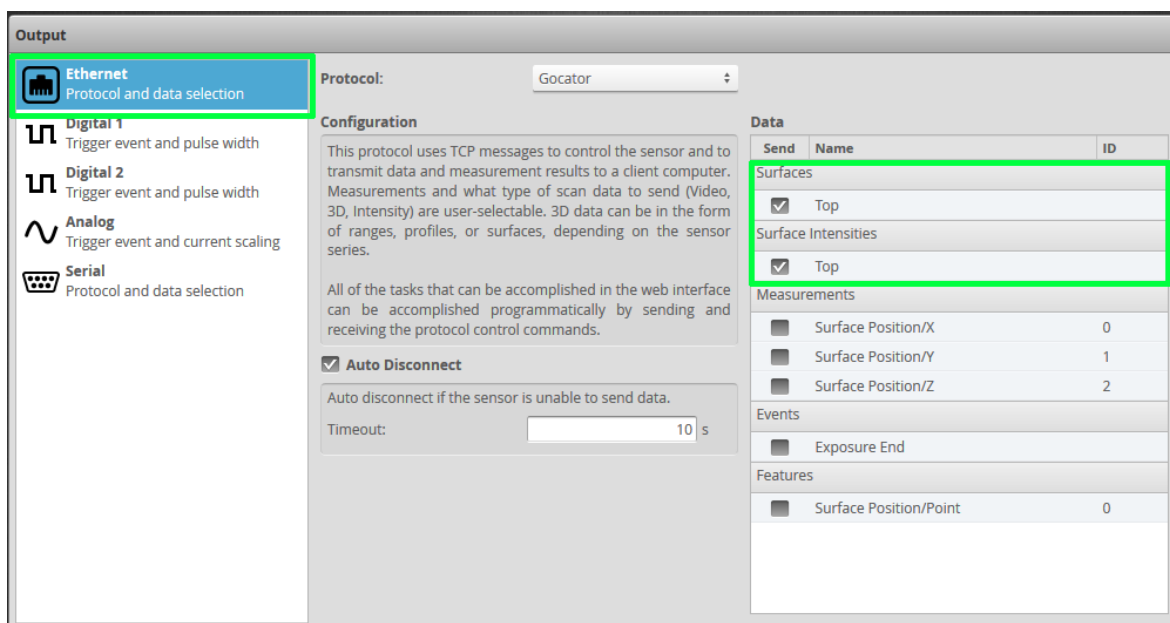

For the outputs in the Measurement section there are also specified ID's. The same ID should be later set on the Adaptive Vision side.

13. Now go back to Adaptive Vision Studio. In Image Acquisition (Third Party) section find LMI and double-click. Choose Gocator_GrabSurface to grab a surface or Gocator_GrabProfile to grab a profile. Run or iterate the program. It is recommended to use the other option for testing. If everything works fine you will receive the point cloud or the profile of the object from your Gocator.

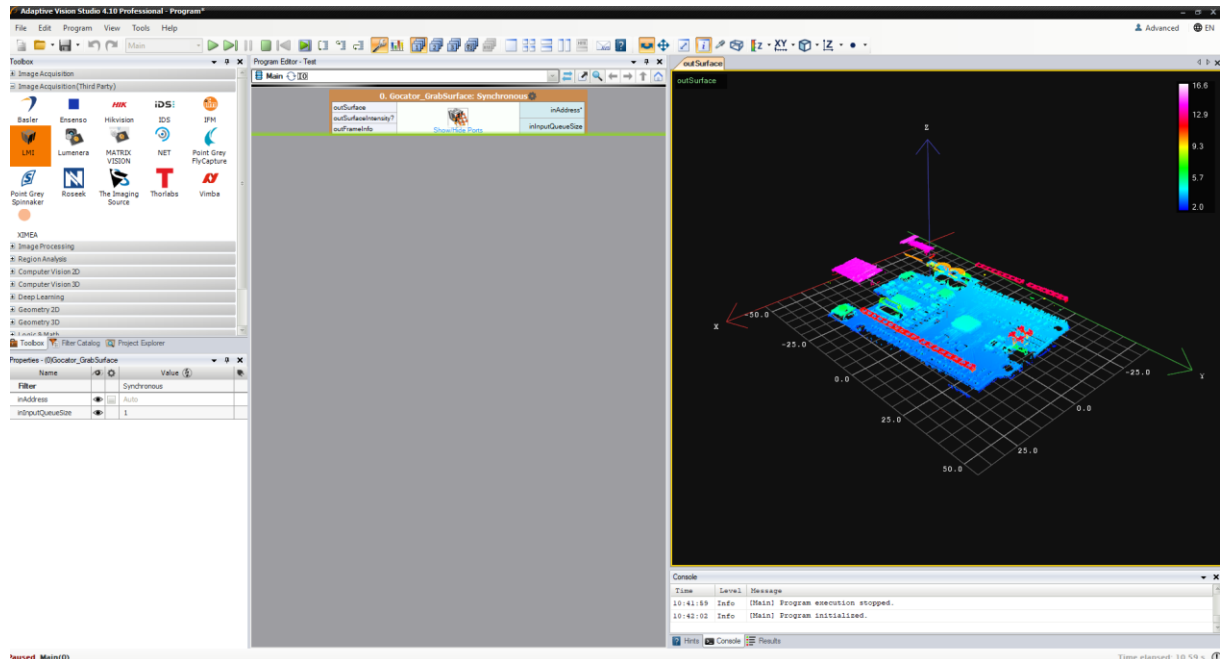

Note that this filter has an input *inAddress*, but it is not necessary to use it if there is only one Gocator connected with your PC. You must set this input if there are more sensors.

14. If no problems occurred as far, it means you have successfully connected Adaptive Vision Studio with the Gocator.

4. Troubleshooting




















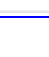
If you had any problems during the connection process, you could find some solutions here.

- If you cannot connect with a Gocator, please verify your Ethernet connection. Unplug your Internet cable and plug the cable from the Gocator.
- Verify whether you have correctly set IP address.
- If the device cannot connect, use the Security button on your Master device.
- Make sure your browser uses the newest version of Flash.
- In the case that other page is displayed on the 192.168.1.10 address press Ctrl + F5 to force a cache refresh.

If you meet the problem we have not mentioned above, please let us know, so that we could investigate it and add it to this section.

5. Gocator filters in Adaptive Vision Studio

To see the full list of filters intended to work with Gocator devices, visit: <https://docs.adaptive-vision.com/current/studio/filters/Gocator/index.html> or take a look at the list below:

Icon	Name	Description
	Gocator_GenerateSoftwareTrigger	Generates software trigger.
	Gocator_GetCurrentJobName	Reads current job name.
	Gocator_GetTriggerSource	Gets current trigger source.
	Gocator_GrabImages	Captures images from Gocator device.
	Gocator_GrabImages_WithTimeout	Captures images from Gocator device.
	Gocator_GrabMeasurement	Captures Measurement data from Gocator device.
	Gocator_GrabMeasurement_WithTimeout	Captures Measurement data from Gocator device.
	Gocator_GrabPoint3DGrid	Captures Point3DGrid (Un-Resampled surface) from Gocator device.
	Gocator_GrabPoint3DGrid_WithTimeout	Captures Point3DGrid (Un-Resampled surface) from Gocator device with timeout; returns Nil if no data comes in the specified time.
	Gocator_GrabProfile	Captures profile from Gocator device.
	Gocator_GrabProfile_WithTimeout	Captures profile from Gocator device.
	Gocator_GrabSection	Captures Section from Gocator device.
	Gocator_GrabSection_WithTimeout	Captures Section from Gocator device.
	Gocator_GrabSurface	Captures Surface from Gocator device.
	Gocator_GrabSurface_WithTimeout	Captures Surface from Gocator device with timeout; returns Nil if no data comes in the specified time.
	Gocator_GrabUniformProfile	Captures uniform profile from Gocator device.
	Gocator_GrabUniformProfile_WithTimeout	Captures uniform profile from Gocator device.
	Gocator_LoadJob	Loads new job.
	Gocator_StartAcquisition	Initializes and starts image acquisition in a Gocator device.
	Gocator_StopAcquisition	Stop image acquisition in a Gocator device.

6. Working with Emulator

Gocator Emulator is a software that allows for running a virtual sensor instead of using the real one. Emulator's interface is identical as the one in a web browser. Thanks to that you can get acquainted with all functionalities that the Gocator provides.

To start working download the proper tools package from: <http://lmi3d.com/support>.

Then to run the application first unzip the package then find GoEmulator file and run it. The emulator lets you to change a language and select version. After launching the application start from step 12 according to the walkthrough in chapter 3 (page 7).

After starting GoEmulator, you must choose a scenario to be run. It is possible to display data from scenarios in Adaptive Vision Studio. The connection between Adaptive Vision Studio and GoEmulator should be set automatically – you do not have to set a specific IP.


7. Examples

In this chapter several examples are presented to help you understand how to use functionalities described above and to help you learn how to work with the Gocator's user interface and filters in Adaptive Vision Studio.


Example 1 – getting profile

To grab profile from a Gocator (in this case Emulator) follow the steps below:


- Choose a scenario:

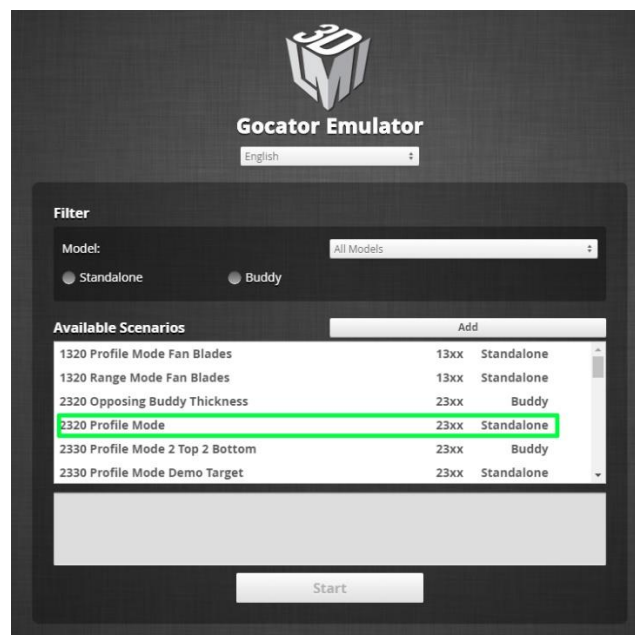


- In the "Scan" tab run the scenario:

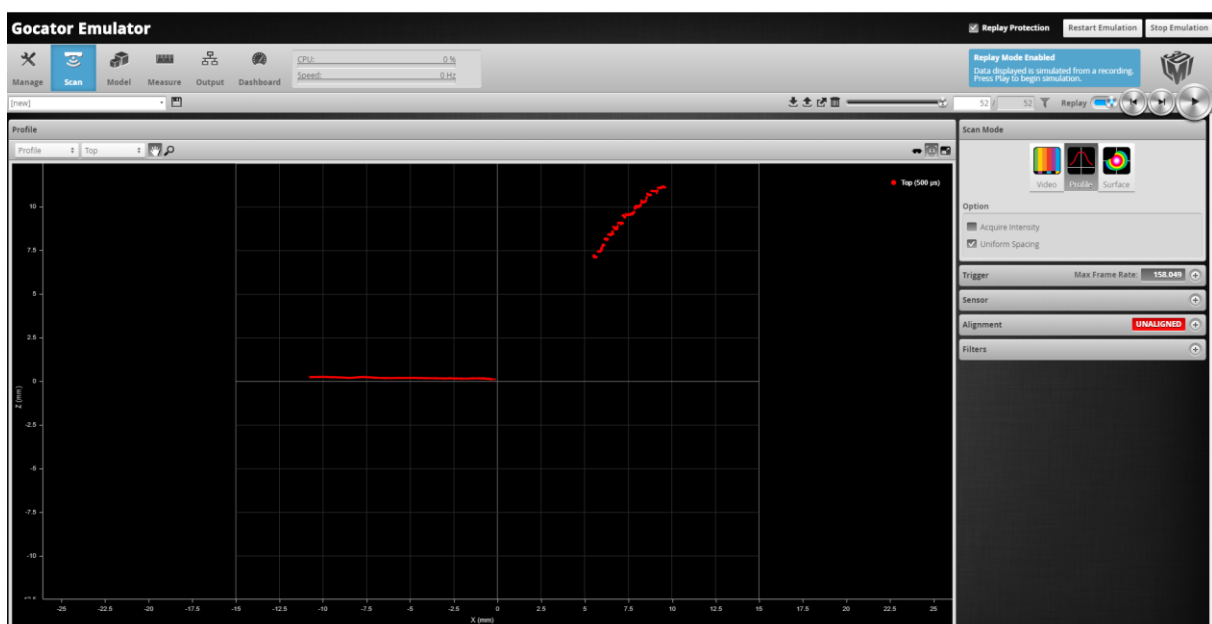

- In the “Output” tab make sure that the profile top output is marked:

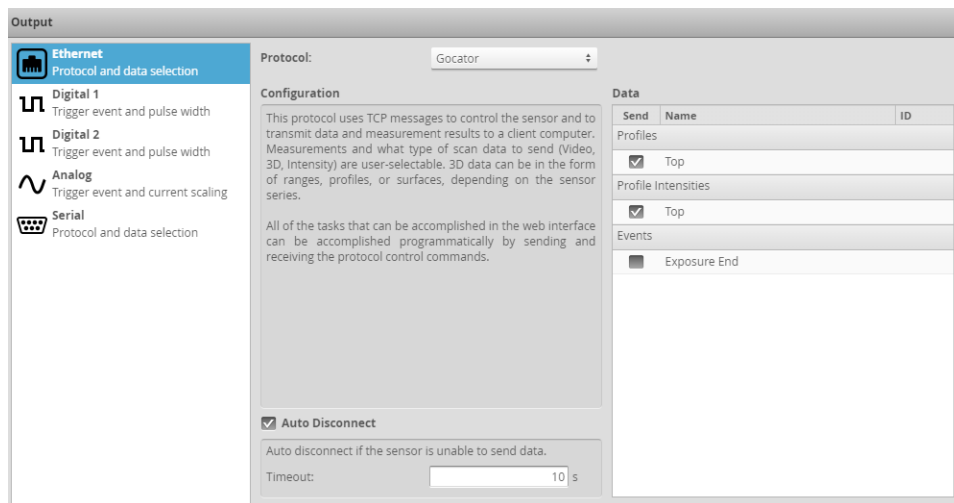

- In Adaptive Vision Studio choose the **Gocator_GrabUniformProfile** filter and add the output **outProfileData** to a preview window:

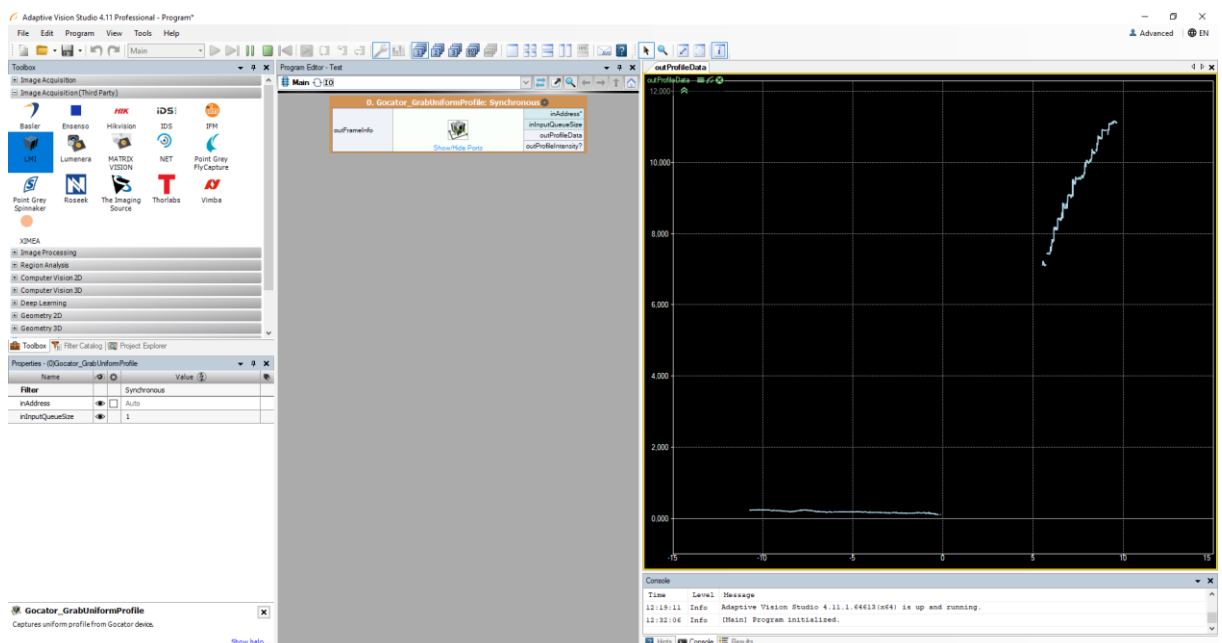


Example 2 – getting surface

To grab surface from a Gocator (in this case Emulator) follow the steps below:


- Choose a scenario:




- In the “Scan” tab run the scenario:

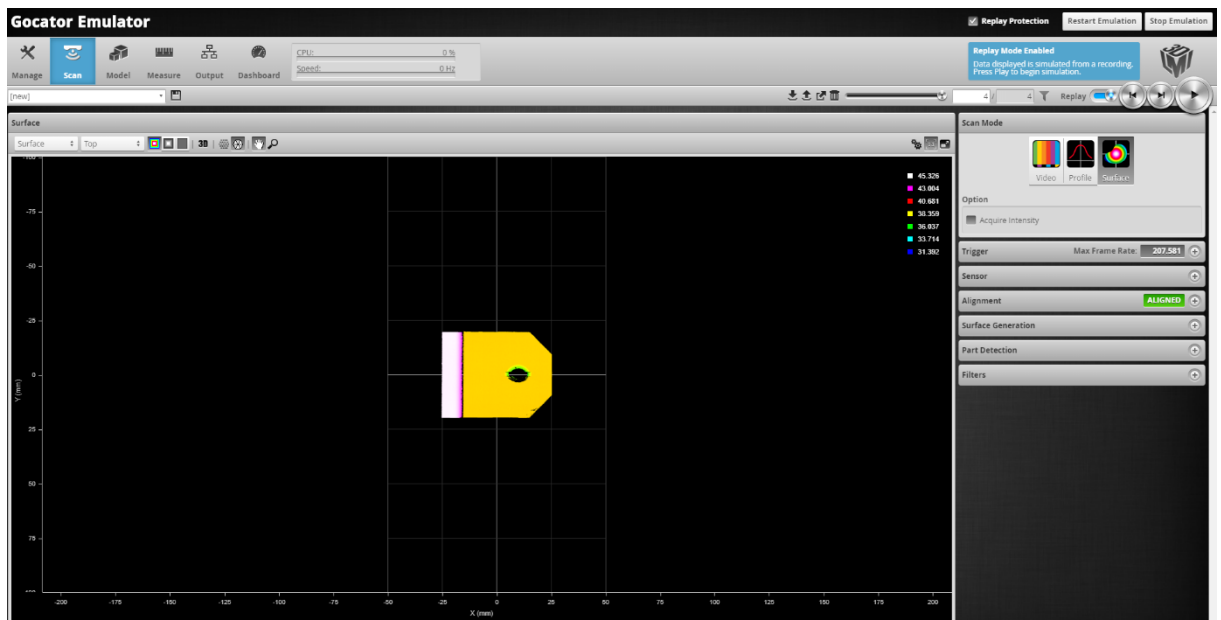

- In the “Output” tab make sure that the surface top output is marked:

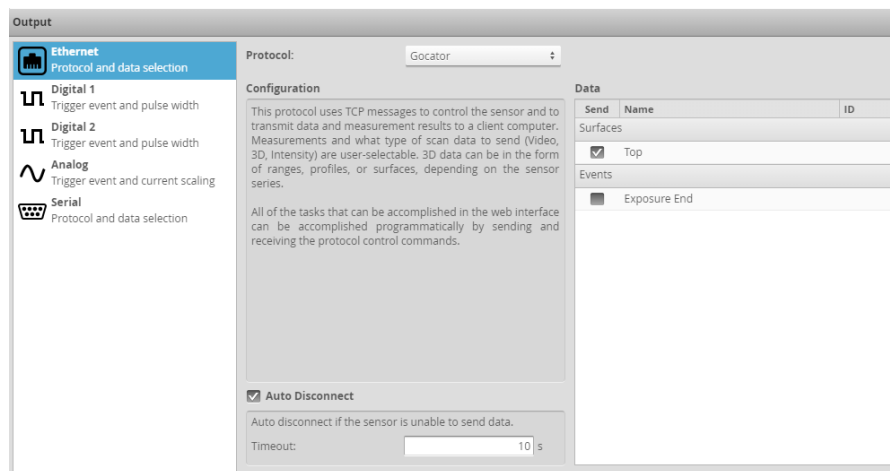


- In Adaptive Vision Studio choose the **Gocator_GrabSurface** filter and add the output **outSurface** to a preview window:

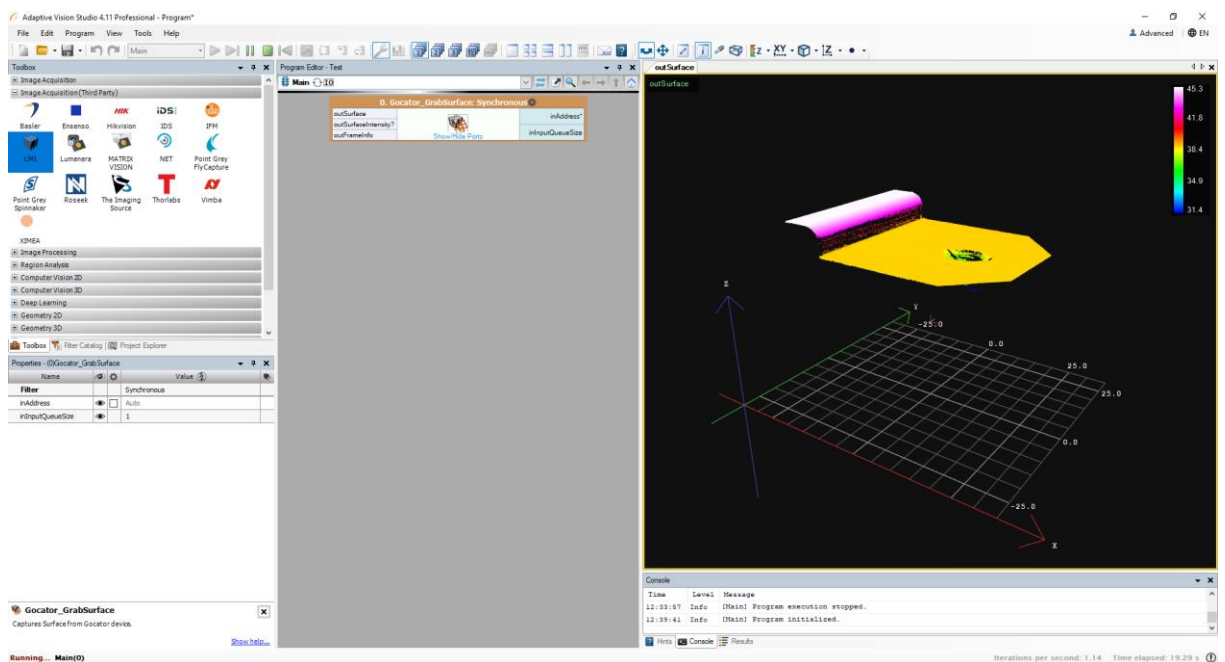


Example 3 – getting measurements

To grab measurement from a Gocator (in this case Emulator) follow the steps below:


- Choose a scenario:

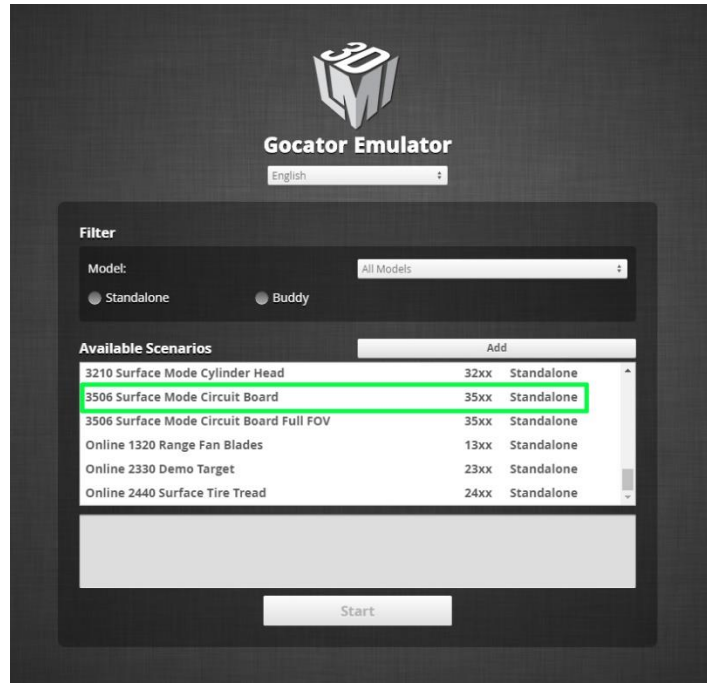


- In the “Scan” tab run the scenario:

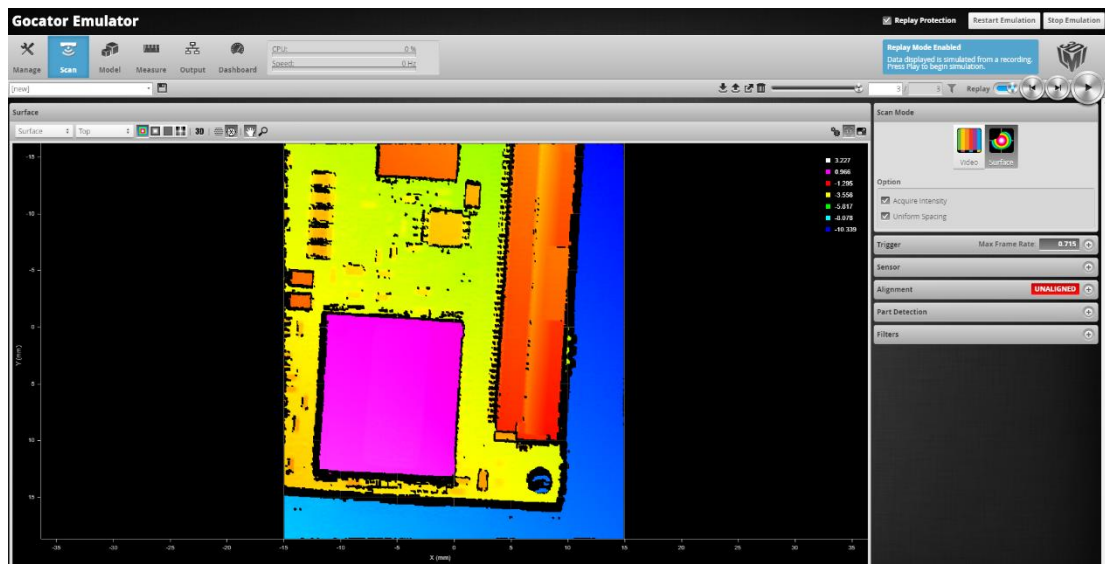

- In the “Measure” tab choose required measurements:

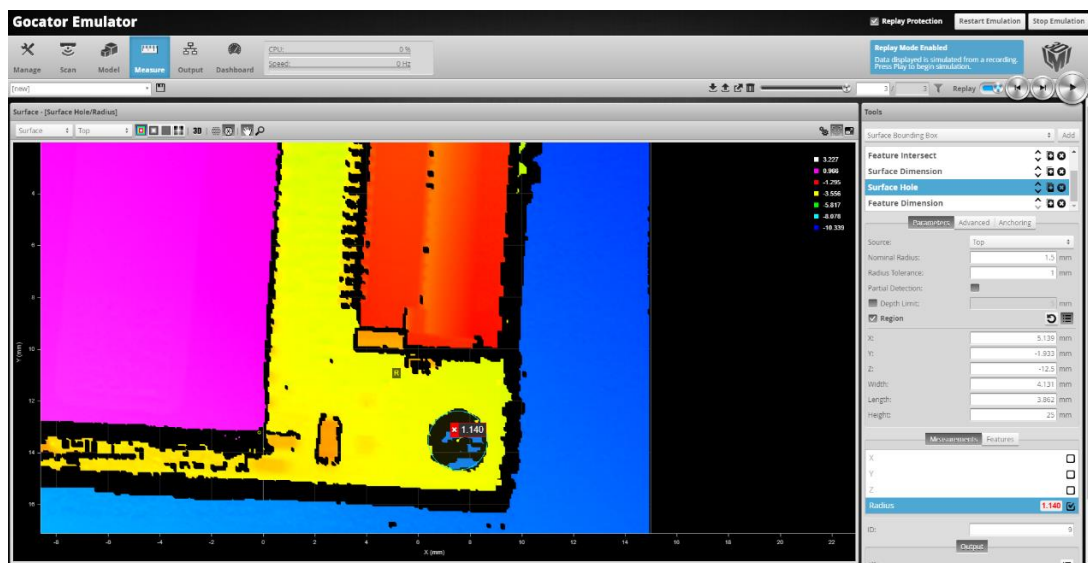

- In the “Output” tab make sure that the output data you would like to send is marked:

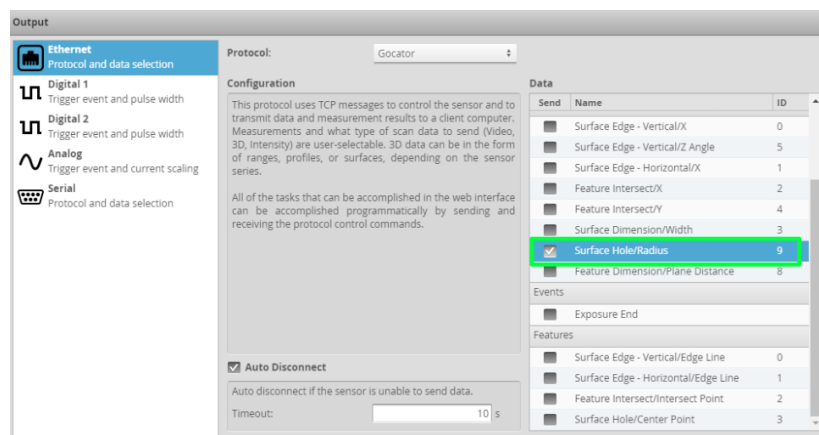

- In Adaptive Vision Studio choose the **Gocator_GrabMeasurement** filter and add the output **outValue** to a preview window. Please note that the data output from a previous paragraph has a specific ID, so you must enter this value in Adaptive Vision Studio - in Property window there is the parameter named **inMeasurementID** that should be set to 9, because our goal is to display the value of hole’s radius:

